


**MXI-LEVEL 2, ISOLATOR-CEILING HUNG,  
 SPRING HANGER**

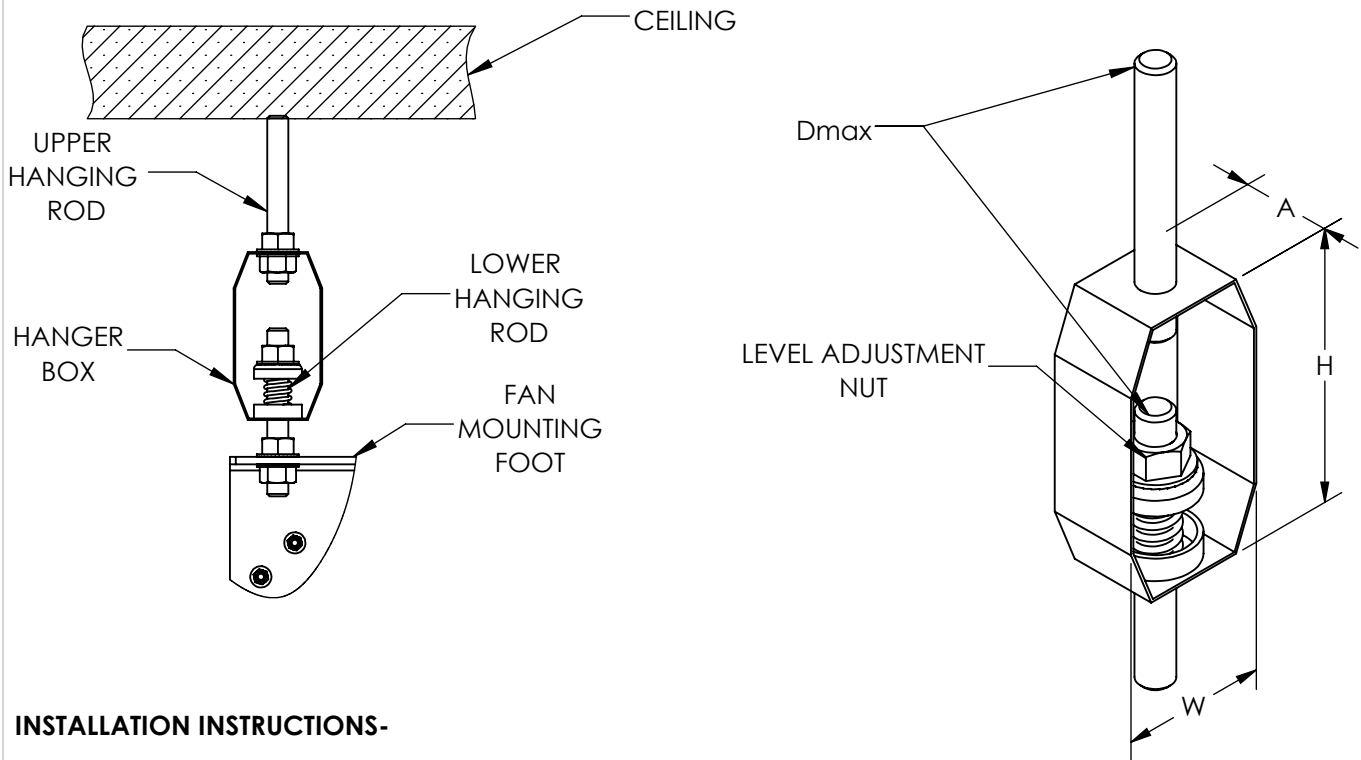

**INSTALLATION INSTRUCTIONS-**

1. LOCATE EACH HANGER IN POSITION USING DRAWING. ATTACH HANGER BOX TO UPPER HANGING ROD AND FAN TO LOWER HANGING ROD.
2. IF NECESSARY ADJUST FAN LEVEL USING LEVEL ADJUSTMENT NUT.
3. CHECK ALIGNMENT BETWEEN LARGER HOLE ON BOTTOM OF HANGER BOX AND LOWER HANGING ROD.

**DIMENSIONAL DATA**

| LEVEL 2 SIZES  | RATED LOAD(lbs) | RATED DEFLECTION(in) | SPRING O.D. | FREE HT | A     | Dmax | H      | W       |
|----------------|-----------------|----------------------|-------------|---------|-------|------|--------|---------|
| <b>122</b>     | 70              | 1.36                 | 1 3/4       | 3 3/16  | 2 1/4 | 5/8  | 5 1/4  | 3 11/16 |
| <b>135-165</b> | 125             | 1.25                 | 1 3/4       | 3 3/16  | 2 1/4 | 5/8  | 5 1/4  | 3 11/16 |
| <b>182-222</b> | 245             | 1.19                 | 1 3/4       | 3 3/16  | 2 1/4 | 5/8  | 5 1/4  | 3 11/16 |
| <b>245-270</b> | 370             | 0.96                 | 1 3/4       | 3 3/16  | 2 1/4 | 5/8  | 5 1/4  | 3 11/16 |
| <b>300</b>     | 450             | 1.54                 | 3           | 4 1/4   | 3 5/8 | 1    | 8 9/16 | 5 9/16  |
| <b>330</b>     | 625             | 1.44                 | 3           | 4 1/4   | 3 5/8 | 1    | 8 9/16 | 5 9/16  |
| <b>365-402</b> | 800             | 1.31                 | 3           | 4 1/4   | 3 5/8 | 1    | 8 9/16 | 5 9/16  |
| <b>445</b>     | 1000            | 1.15                 | 3           | 4 1/4   | 3 5/8 | 1    | 8 9/16 | 5 9/16  |
| <b>490</b>     | 1250            | 1.09                 | 3           | 4 1/4   | 3 5/8 | 1    | 8 9/16 | 5 9/16  |
| <b>542-600</b> | 1700            | 0.95                 | 3           | 4 1/4   | 3 5/8 | 1    | 8 9/16 | 5 9/16  |

ALL DIMENSIONS ARE IN INCHES

REVISION:

FORM:

REPLACES: